



UTILBOOT.ASM

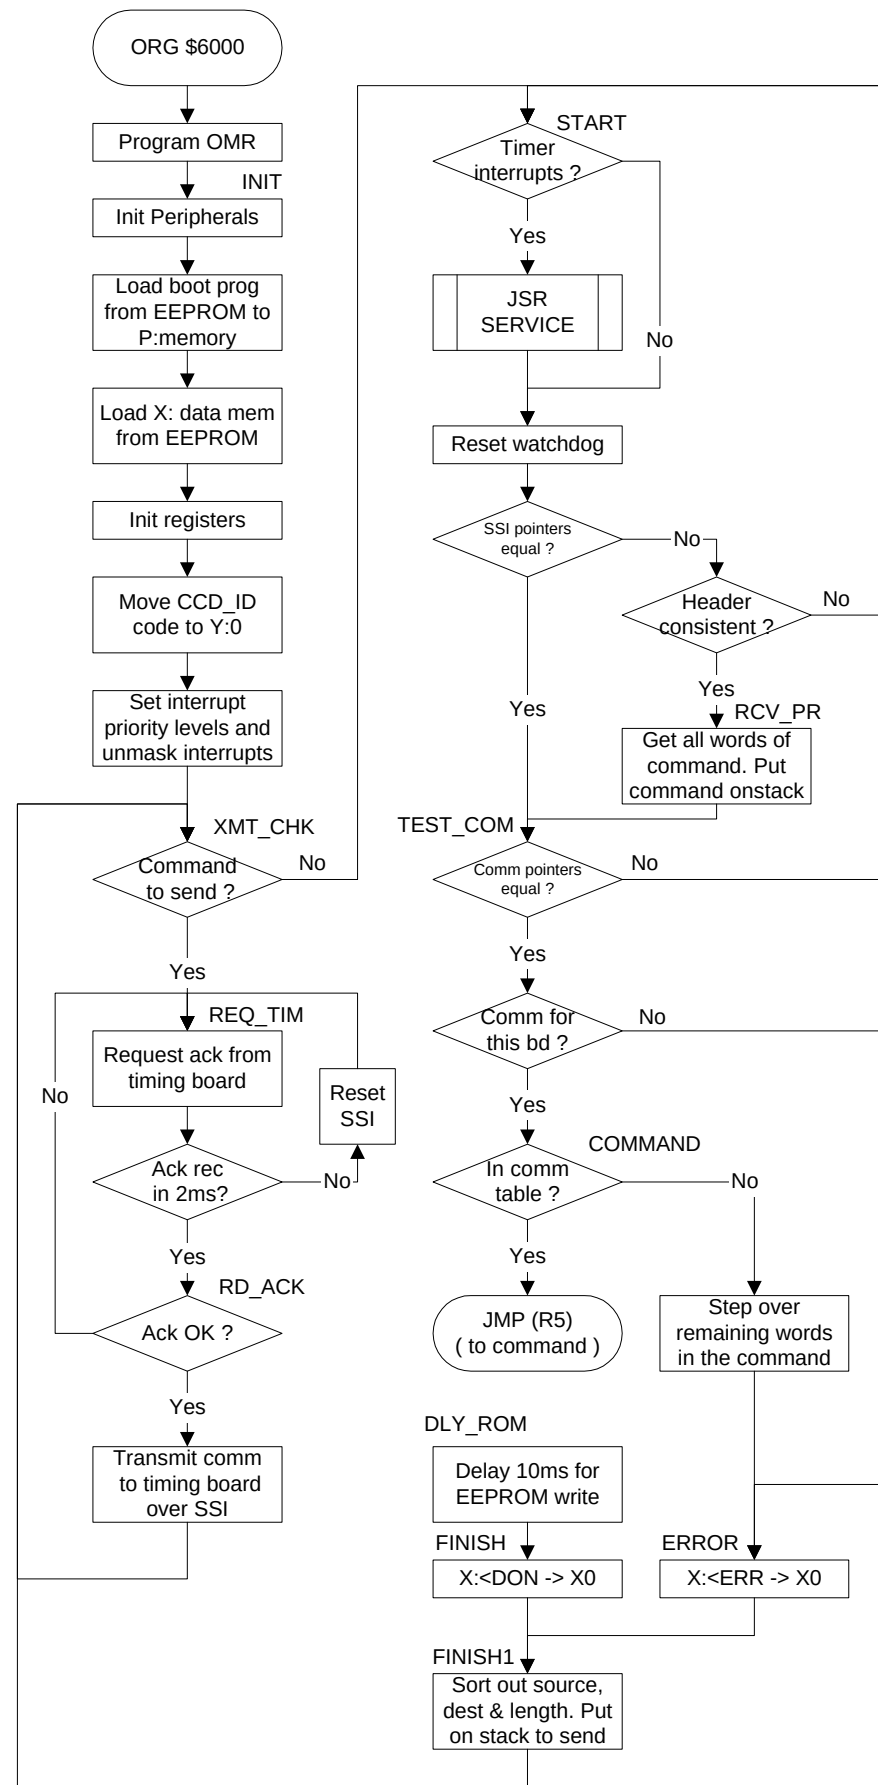

MAIN LOOP

SUBROUTINES
& INTERRUPT
SERVICE ROUTINE

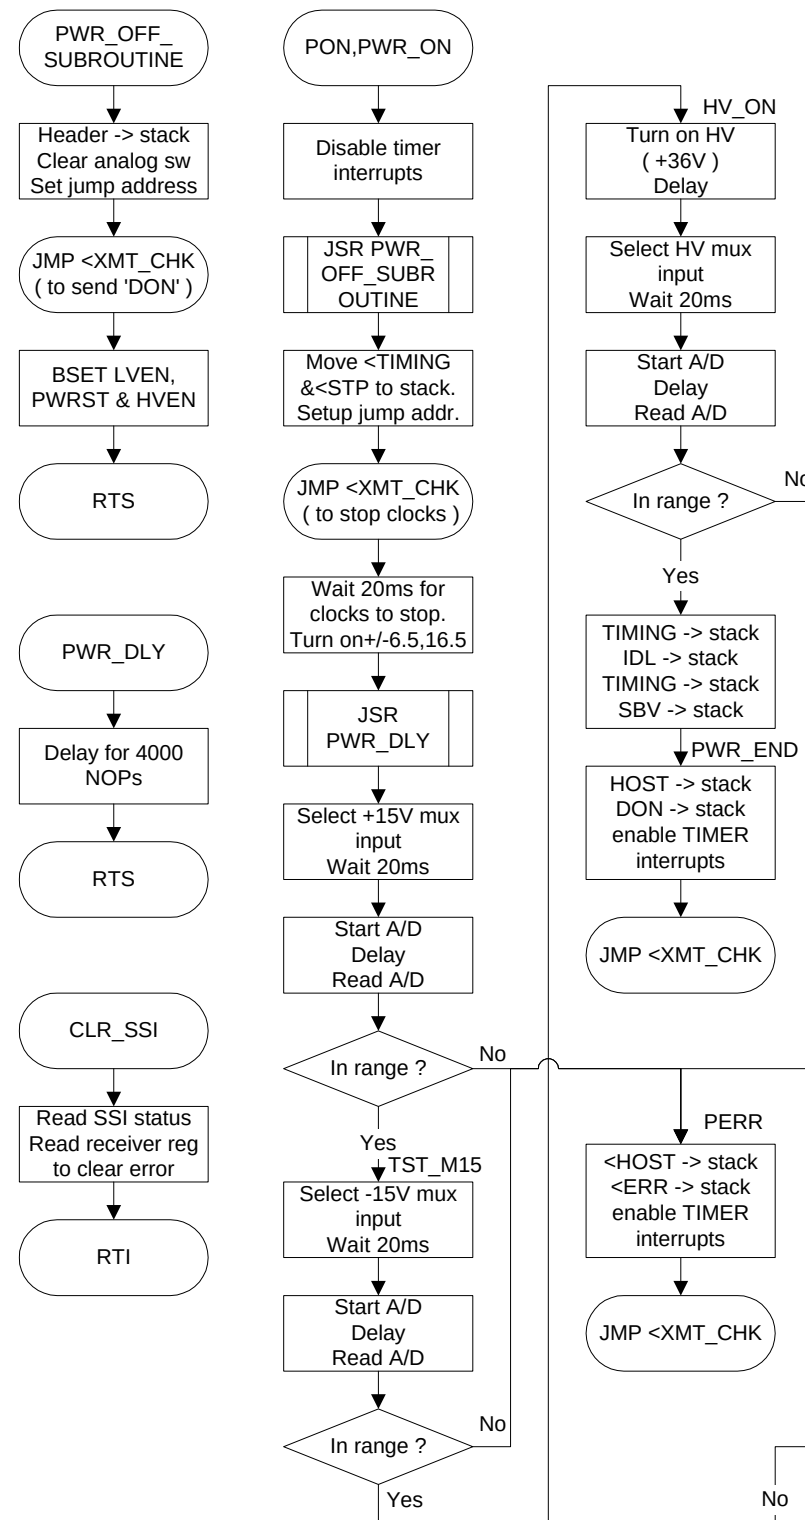

COMMANDS

