

## CASS AG Internal Cabling

CASS AG HEAD 2041	New Head Function	Externally Mounted A&G box 2041	required destination on SDSU 2041	Externally Mounted A&G box temp	required destination on Peltier rack
A	chassis	f	A		
B	Pelt+			J	A
C	Pelt-			K	B
D	peltier status		a	A	
E	heatsink temp-		E	B	
F	heatsink temp+		F	C	
G	Preamp power+	n	G		
H	Preamp power-	p	H		
J	OG	E	J		
K	Sheath L	s	K		
L	AMP_L	k	L		
M	AMP_R	m	M		
N	VSS,GND	H	N		
P	DG	F	B		
R	R2L	Z	R		
S	clock screen	g	S		
T	ldrtn	B	T		
U	Fan+			L	E
V	Fan-			M	F
W	ID1	S	W		
X	ID2	A	X		
Y	ID3	D	Y		
Z	preflash		I		
a	CCD temp	M	j		
b	spare	t	b		
c	spare	K	Z		
d	ODR/ODL/ABD	L	d		
e	RDL/R	G	e		
f	SheathR	J	f		
g	RIL	X	g		
h	R3L/R3R	Y	h		
i	R1R	n/c	U		
j	R2R	W	V		
k	I3	P	k		
m	S1	T	m		
n	S2	V	n		
p	analog scrn	C	p		
q	PhiR	b	q		
r	I1	N	r		
s	I2	R	s		
t	S3	U	t		

Notes:

I and j the R1R,R2R lines are not driven due to lack of wires inside A&G box instead these are commoned up inside the AG6 head with R1L and R2L preflash not implemented either (LED desoldered in AG6 head)

Sheaths in internal A&G box cabling:

DD ->pin A on head

CC ->pin S on head

AA-> pinD on head

BB->pins K,D,I

SMT Dec 02 2003

new connections