


Additions required to existing autoguider heads.

1. Mechanically mount flow sensor.
2. Feed +/-9v pre-amp supply to flow sensor.
3. Connect flow sensor output to 20-41 connector.
4. Wire ID code links to 20-41 connector.

### Autoguider Head

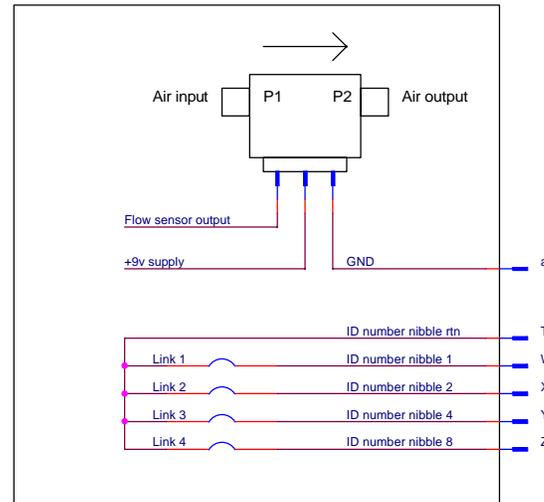

Title		
<b>SDSU Autoguider Head cabling (mods)</b>		
Size	Document Number	Rev
B	<Doc>	
Date: Wednesday, May 08, 2002		Sheet 1 of 1